



TECHNICAL GUIDE

Truck Air Compressor Overhaul Kit: Head, Valve Plate, Gasket

Compressor overhaul guide for heavy trucks: when to renew the cylinder head, valve plate and gaskets, fault diagnosis, torque values and fitting steps.

One of the sentences we hear most often in the field is this: "The compressor isn't building air, let's replace the whole unit." Yet on heavy commercial vehicles, the majority of air compressors lose performance simply because the top end is worn out, while the housing and crank assembly are still perfectly sound. The reed leaves on the valve plate fatigue, the air passages in the cylinder head carbonise, and the head gasket starts to leak pressure. In this situation, scrapping the complete compressor is both expensive and unnecessary. A correctly diagnosed overhaul kit — cylinder head, valve plate and gasket set — can restore the compressor to a charging performance close to factory condition. This guide explains when an overhaul is the right call and when it isn't, which symptom points to what, and where the mistakes are made during assembly.

 **TIP — About this guide:** Prepared by the VADEN ORIGINAL technical team, based on field and manufacturing experience with heavy commercial vehicle air systems. The torque, pressure and temperature figures given here are **typical reference ranges**; in practice, the current service manual of the vehicle and compressor manufacturer must be taken as the basis. **Last updated: July 2026.**

What Is a Compressor Overhaul (cylinder head/valve plate/gasket)? Function and Operating Principle

A compressor overhaul is the restoration of the charging performance of a heavy commercial vehicle air compressor by renewing the pressure-generating top end — the cylinder head, valve plate and gasket set — without replacing the complete compressor.

In a reciprocating air compressor, the work actually comes down to two surfaces: the volume swept by the piston, and the valve plate through which that volume breathes. The crank is driven by the engine (in most applications from the timing gear, or via a belt/coupling); as the piston travels down, the vacuum created inside the cylinder opens the intake reed on the valve plate and air is drawn in. As the piston rises, the intake reed closes; once the compressed air reaches a certain pressure, the discharge reed opens and the air is delivered through the outlet passage in the cylinder head to the dryer (air dryer / pressure regulator group). The head also handles cooling: on water-cooled types the engine coolant circuit passes through the head, while on air-cooled types the fins dissipate the heat.

This cycle repeats thousands of times per minute, even at idle. As a result, the valve reeds are subject to steel fatigue, the head face to thermal stress, and the gaskets to temperature cycling. The "ageing" of a compressor usually begins not in the crank or the housing, but precisely in these three parts — and that is exactly where the logic of the overhaul kit comes from.

- **Cylinder head:** Carries the intake and discharge passages, the cooling jacket/fins and (where fitted) the unloader port connections. It may be aluminium or cast iron.
- **Valve plate:** Containing the intake and discharge reeds, the reed seating faces and the leaf stops, this is the most critical dynamic part of the compressor.
- **Gasket set:** Head gasket, valve plate gasket, intermediate gaskets and, where required, the O-ring/seal group. Their thickness directly affects dead volume and therefore efficiency.
- **Reed leaves and springs:** Generally supplied as a set together with the valve plate; replacing them individually is not recommended.

- **Fixing bolts:** Stretched or necked bolts must be reviewed during the overhaul.

The Difference Between Single-Cylinder and Twin-Cylinder Compressors

Single-cylinder compressors are common on mid-segment trucks and buses, while twin-cylinder units are widespread on tractor units with high air consumption, articulated buses and multi-axle vehicles. On twin-cylinder types the valve plate has separate reed groups for each cylinder; on these units, when the reeds on one side fatigue, the compressor is not cut out completely — the charging time simply becomes noticeably longer. This in turn causes the fault to be noticed late, and exposes the system to moist/oily air for a longer period.

Water-Cooled and Air-Cooled Head Assemblies

On air-cooled heads, the fin structure dissipates heat into the surroundings; compressor temperature varies more with ambient conditions and load. On water-cooled heads, engine coolant circulates through the head and the outlet air temperature stays more stable. The critical point during an overhaul is this: **on water-cooled heads, if the gasket is fitted incorrectly, coolant can enter the compressed air circuit.** If an unexpected smell of antifreeze or an emulsion is seen in the dryer and air tanks, one of the first places to suspect is the head/valve plate gasket line.

Unloader Design and Energy Saving

Most modern compressors have an unloading arrangement that runs the compressor off-load once the air system reaches cut-out pressure. On some types this arrangement is built directly into the cylinder head (pneumatic pistons in the head hold the intake reed open). When overhauling the head of such a compressor, the condition of the unloader pistons, springs and O-rings must always be checked; otherwise the compressor may show "constantly building" or "not building at all" behaviour.

Use / Application	Typical Compressor Design	OE System Context	Key Point During Overhaul
Mid-segment truck, distribution vehicle	Single-cylinder, air-cooled	Knorr-Bremse / Wabco (today under the ZF umbrella) type air treatment group	Fin cleaning and head face flatness
Long-haul tractor unit (high consumption)	Twin-cylinder, water-cooled	Knorr / Bendix equivalent systems, external air dryer	Simultaneous renewal of both reed groups
City bus (door + suspension consumption)	Twin-cylinder, with unloader	Voith / ZF transmission and Knorr type brake group context	Unloader pistons and O-ring set
Construction / earthmoving vehicle (dusty environment)	Single- or twin-cylinder	Intake fed from the engine air filter	Intake path and intake reed wear
Head connected to the cooling system	Water-cooled head assembly	Mahle / Behr equivalent cooling circuit	Coolant transfer gasket and leak tightness check

⚠ CAUTION — Part number verification is essential: Even on the same engine and the same vehicle model, head/valve plate geometry and gasket thickness can vary according to the year of production, the compressor manufacturer and the cooling type. Before ordering, verify the **manufacturer number on the compressor housing**, the vehicle chassis number and the cooling type of the existing head together. Even if the head bolt pattern looks identical, the compressor will not build air if the valve plate port geometry differs.

Failure Symptoms and Diagnosis

Almost all compressor top-end faults arrive at the workshop with the complaint "the air builds up slowly". However, the same complaint can also be caused by the dryer, the regulator, a hose or a system leak. That is why the order of diagnosis matters: first eliminate the system leak, then look at the compressor.

Symptom	Possible Cause	Check / Verification
Air charging time has become noticeably longer, the warning lamp goes out late	Valve plate reeds fatigued/broken, head gasket leaking internally	Once a system leak has been ruled out, measure the charging time from empty tanks up to cut-out pressure and compare it with the reference in the service manual
The compressor runs continuously and never reaches cut-out pressure	The discharge reed does not close fully, the unloader is stuck, or there is a major leak in the system	Blank off the regulator outlet and test the compressor on its own; check the control pressure in the unloader line
Excessive oil coming from the air tanks and the dryer, oily water from the drain valve	Ring/cylinder wear or oil carry-over due to overheating; loss of top-end sealing	Inspect the dryer cartridge and the tank drain valve; if the amount of oil is very high, the problem may not be limited to the top end — evaluate the bottom end as well
The compressor discharge pipe/hose overheats, paint discolouration is visible	Carbonised discharge passage, continuous operation under load, insufficient cooling	Measure the outlet line temperature with a non-contact thermometer; assess passage blockage from the outside before removing the head passage
Metallic rattling / knocking noise from the compressor	Broken reed fragment, loose head bolt, leaf stop damage	Remove the head and visually inspect the plate face and the reed leaves; a broken fragment may have entered the cylinder
Air leak / hissing sound around the head	The head gasket is crushed, or the face is leaking due to an incorrect tightening sequence	Check around the head with soapy water while running; if there is a leak, the gasket and the face flatness must be addressed together
Coolant level dropping, traces of antifreeze in the air circuit	Damage to the coolant transfer gasket on a water-cooled head	Pressure-test the cooling circuit; look for emulsion when draining the air tank and dryer
Air blowing back / kick-back from the intake area with the engine at idle	The intake reed does not close, or the seating face is damaged	Remove the intake line (filter/intake hose) and check whether there is any blow-back

Eliminate the System Leak First

The air system is brought up to cut-out pressure, the engine is stopped, and the pressure drop over a set period is monitored without pressing the brake pedal. The acceptable drop varies by vehicle manufacturer; but if the difference is significant, the problem is not in the compressor but in the circuit. Before looking at the compressor top end, air bellows, door cylinders, the park brake line and trailer connections must be ruled out.

Measuring Charging Time: The Most Objective Test

Once the tanks have been fully drained, the engine is held at a specified speed and the time taken for the system to reach cut-out pressure is measured with a stopwatch. A value significantly longer than the reference in the service manual is the strongest indicator of top-end performance loss. Always repeat the measurement under the same conditions (same engine speed, same ambient temperature).

Overhaul or Complete Replacement?

The decision comes down to this distinction: if the problem originates from **sealing and valves**, the overhaul kit is the right solution. If the problem is **crank bearing clearance, cylinder wear, excessive oil consumption or a cracked housing**, an overhaul provides only temporary relief and the vehicle will be back before long. If, once the head is removed, there is visible scoring on the cylinder wall, permanent damage on the piston crown or perceptible play in the crank, the honest answer is complete replacement. Fitting an overhaul kit despite this picture means making the customer pay twice.

Replacement / Installation Steps

⚠ CAUTION — Personal Protective Equipment and safety: Before starting work, **fully exhaust the air system** (including all tanks and the dryer) — removing the head on a pressurised system can cause serious injury. The vehicle must be secured and chocked, and the battery terminal disconnected. The compressor and outlet line stay **extremely hot** for a long time after operation; wait for them to cool. On water-cooled types, the cooling circuit must also be depressurised and cool. Safety goggles, cut-resistant gloves and safety footwear are mandatory.

- 1 Exhaust the system and secure the vehicle:** Drain all air tanks via the drain valves and confirm that the gauge reads zero. Chock the vehicle and disconnect the battery. If the head is water-cooled, release the pressure in the cooling circuit as well.
- 2 Clean the work area:** Remove dust, oil and dirt from around the compressor before taking the head off. A single speck of dust or a fragment of gasket dropped into the cylinder can damage the new valve plate on first start-up.
- 3 Mark and disconnect the connections:** Label or photograph the intake hose, discharge pipe, unloader control line and (where fitted) the coolant hoses before removing them. Plug all open ports.

- 4 Remove the cylinder head in the correct sequence:** Loosen the head bolts **from the centre outwards, in a crosswise sequence and in stages**. Fully loosening them in one go can warp the head. Do not lever the head off with a screwdriver; you will permanently ruin the faces.
- 5 Remove the valve plate and the gaskets:** When taking the plate off, always note which face was pointing up — most plates have a geometry that allows them to be fitted upside down, and if fitted the wrong way round the compressor will not build air at all. Make sure all of the old gasket material has been removed.
- 6 Assess and clean the faces:** Remove carbon deposits from the head and housing faces with a soft scraper and a suitable cleaner. **Do not use abrasive paper or grinding;** it destroys the face flatness and abrasive residue finds its way into the cylinder. Check face flatness with a straight edge and feeler gauge.
- 7 Inspect the cylinder and piston (decision point):** If there is damage on the piston crown, deep scoring on the cylinder wall, a broken ring or heavy oil build-up, stop and reconsider the overhaul decision. With this picture, a top-end overhaul will not be a lasting solution.
- 8 Fit the new gaskets dry and the correct way round:** Unless otherwise specified, **do not apply liquid gasket or silicone** to compressor head/plate gaskets. The holes in the gaskets must line up exactly with the port geometry; blocking a single oil or coolant hole will burn out the compressor in a very short time.
- 9 Seat the valve plate and the head:** Locate the plate on its dowel pins and make sure the reeds move freely. Lower the head straight down, do not slide it — if the gasket shifts, the port alignment is lost.
- 10 Tighten the bolts in the torque sequence:** First seat the bolts by hand, then tighten them **from the centre outwards in a crosswise sequence, in at least two or three stages**, up to the torque value given by the manufacturer. Applying full torque in a single step warps the head and the new gasket leaks on day one.
- 11 Complete the connections and test:** Refit the intake, discharge, control and coolant lines. Start the engine and charge the system; measure the time to reach cut-out pressure and leak-test around the head with soapy water. On water-cooled types, check the coolant level and any sign of mixing. Refer to the manufacturer's instructions regarding a torque check when cold after a short run.

Points to Watch (Common Mistakes)

⚠ CAUTION — The three most expensive mistakes: (1) Fitting the valve plate upside down — the compressor will not build air at all, or will break a reed instantly. (2) Applying silicone/liquid gasket to the gaskets — excess silicone enters the passages and blocks the dryer and the valves. (3) Tightening the head bolts without regard to torque and sequence — the head warps and the leak returns within a few days.

⚠ CAUTION — Fitting a kit without looking at the root cause: The real reason a compressor burns out is often not the compressor itself — it is a system leak that forces it to run continuously under load, a blocked intake filter, a saturated air dryer cartridge or a faulty regulator. An overhaul kit fitted without curing the leak will end up in the same state within the same time as the old one.

- **Dirty assembly:** A single crumb of gasket that gets into the cylinder can damage the new plate within the first few minutes. Cover the cylinder bore with a clean cloth while the head is off.
- **Reusing the old gasket:** A gasket that has been crushed once will not give the same seal a second time. The gasket set is single-use.
- **"Correcting" the face with abrasive paper:** If the head face is outside the flatness tolerance, the solution is not abrasive paper but head replacement.
- **Reusing a fatigued bolt:** A necked bolt or one with thread damage will not hold the correct torque; if the manufacturer specifies a limit, renew it.
- **Skipping the air dryer:** If the compressor is overhauled but a saturated dryer cartridge is left in place, moisture continues to be carried into the system and the valves are damaged again.
- **Ignoring the intake path:** On vehicles working in dusty environments, a blocked or holed intake line will wear the intake reed in a short time.
- **Not checking the drive side:** Gear backlash, coupling wear or belt tension causes vibration and premature damage in the compressor.
- **Handing over without testing:** An overhaul carried out without measuring the charging time cannot be counted as "completed"; demonstrate with figures that the performance has come back.

Technical Values and Check Points

The tables below give **typical / general reference** ranges for heavy commercial vehicle air systems. They vary by vehicle and compressor manufacturer; for exact values, the relevant service manual is decisive.

Parameter	Typical Reference Range	Explanation / Note
System cut-out (governor/regulator) pressure	approximately 8.0 – 12.5 bar (≈115 – 180 psi)	Varies with the vehicle and brake system architecture; set at the regulator
Cut-out – cut-in differential (hysteresis)	approximately 0.6 – 1.5 bar	A significant narrowing of this differential may indicate a regulator problem
Compressor outlet air temperature (under load)	approximately 130 – 200 °C	Continuously high values accelerate carbonisation and valve damage
Pressure drop after the engine is stopped	manufacturer tolerance is decisive — typically a negligible drop over a period of minutes	If there is a significant drop, the problem is not the compressor but a system leak

Parameter	Typical Reference Range	Explanation / Note
Charging time from empty tanks to cut-out pressure	the reference value in the service manual	Exceeding the reference significantly is the main indicator of top-end fatigue
Head / housing face flatness	manufacturer tolerance — usually very tight, in the order of tenths of a mm	Checked with a feeler gauge; if out of tolerance, the head is renewed
Coolant operating temperature (water-cooled head)	approximately 80 – 95 °C	Shared with the engine cooling circuit; a high value stresses the compressor too

Connection	Typical Torque Order of Magnitude	Application Note
Cylinder head bolts	in the order of approximately 20 – 45 Nm (varies by type)	Crosswise sequence from the centre outwards, in 2–3 stages; for the exact value, the service manual
Valve plate / intermediate plate fixings	in the order of approximately 15 – 30 Nm	Over-tightening warps the plate and upsets reed seating
Discharge pipe union	in the order of approximately 25 – 50 Nm	The pipe must seat without stress; a strained pipe cracks
Coolant hose / cooling connections	manufacturer value	Over-tightening strips the thread in an aluminium head

 **TIP — An honest note on torque:** Compressor head torques differ considerably according to the manufacturer, the head material (aluminium/cast iron), the bolt length and the gasket type. The figures above are only intended to give an idea of the order of magnitude. **Use a calibrated torque wrench and always verify the value from the relevant service manual** — the "hand-tight is enough" approach is the most common reason for comebacks on head overhauls.

- Has the area around the head passed a soapy-water leak test?
- Has the charging time been measured and compared with the reference value?
- Have the cut-out and cut-in pressures been verified on the gauge?
- Have the condition of the air dryer cartridge and the drain valve been assessed?
- Have the intake line, filter and hose tightness been checked?
- On water-cooled types, have the coolant level and any sign of mixing been checked?
- Have the drive (gear/coupling/belt) clearance and tension been checked?
- Is there excessive oil/emulsion in what comes out of the tank drain valves?
- Is the outlet line temperature within a reasonable range under load?

Maintenance and Service Life

What determines the life of an air compressor is not mileage but **the time it spends under load**. A compressor that is constantly feeding a leak keeps building air at times when it should be running off-load; the temperature rises, the oil carbonises and the valve reeds fatigue far earlier than normal. That is why the most effective compressor maintenance is actually the maintenance carried out outside the compressor: closing system leaks, replacing the dryer cartridge on time and keeping the intake path clean.

- **Air dryer cartridge:** Replace it at the interval specified by the manufacturer (usually annually, or at a set km/operating-hour interval). A saturated cartridge carries moisture straight to the valves and the tanks.
- **Tank drain valves:** Drain them regularly and look at what comes out — clear water is close to normal, heavy oil and emulsion are a warning.
- **Intake line:** Check the integrity of the filter and hose periodically; more often on vehicles working in dusty environments.
- **Engine oil and its interval:** In most applications the compressor is lubricated with engine oil; a delayed oil change is reflected directly in the compressor.
- **Cooling circuit:** On water-cooled heads, if cooling performance drops the compressor temperature rises; radiator/thermostat maintenance is part of compressor maintenance.
- **System leak survey:** Carry out a pressure drop test at every service — this single test is the practice that extends compressor life the most.
- **Discharge pipe:** Assess it for carbon build-up and restriction; a blocked outlet line will render the overhaul pointless.

A top-end overhaul that has been correctly diagnosed and carried out with clean assembly will run the compressor trouble-free for a long time. But an overhaul is not a "reset": if the bottom end of the compressor (crank, bearings, cylinder, rings) is worn out, renewing the top end only buys time. The honest approach is to decide according to the picture you see once the head is off — when an overhaul is appropriate it is economical and lasting; when it is not, it is an expensive way of postponing a complete replacement.

Frequently Asked Questions

What does a compressor overhaul kit do, and what is its advantage over buying a complete compressor?

An overhaul kit restores charging performance by renewing the pressure-generating top end of the compressor — the cylinder head, valve plate and gasket set. If the housing, crank and piston assembly are sound, it is significantly more economical than a complete compressor replacement and the job takes less time. However, if the bottom end is worn out, the advantage disappears.

If the compressor isn't building air, does the compressor always have to be replaced?

No. Behind the complaint "it isn't building air" you very often find a system leak, a faulty pressure regulator, a saturated air dryer or a stuck unloader. First the system leak should be ruled out with a pressure drop test, and only then should the compressor itself be assessed.

Why does the valve plate fatigue?

The reed leaves open and close thousands of times per minute, and this is a classic steel fatigue cycle. High operating temperature, carbonised oil, moisture carried into the system and continuous operation under load all accelerate this fatigue. If a fragment of a broken reed enters the cylinder, the damage may not stay limited to the top end.

How can a compressor head gasket failure be identified, and what are the symptoms?

A hissing sound around the head and bubbles in the soapy-water test, a longer charging time, a dropping coolant level on water-cooled types and emulsion appearing in the air circuit are typical symptoms. When renewing the gasket, face flatness must also be checked; if the face is out of true, the new gasket will leak as well.

To how many Nm are compressor head bolts tightened?

Values in the order of 20–45 Nm are typically seen, but that is only an idea of the order of magnitude. The value varies with the head material, the bolt size and the manufacturer. Tighten with a calibrated torque wrench, in a crosswise sequence from the centre outwards and in stages; verify the exact value from the relevant service manual.

Does the air dryer also need to be replaced when overhauling the compressor?

If the condition of the cartridge is unknown, or its interval has passed, replacement is strongly recommended. A saturated dryer continues to carry moisture into the system and shortens the life of the new valve plate. What makes an overhaul lasting is curing the root cause as well.

If oil is coming from the compressor, will an overhaul kit solve it?

Partly. Where the oil carry-over is due to overheating or loss of top-end sealing, an overhaul provides a clear benefit. But if the oil consumption comes from ring and cylinder wear, a top-end overhaul will not solve the problem — in that case the cylinder wall and piston must be assessed once the head is off.

What should I look out for when choosing a compressor overhaul kit?

The manufacturer number on the compressor housing, the vehicle chassis number, the cooling type (air/water), the number of cylinders and whether an unloader arrangement is fitted must all be verified together. Even on the same engine, head and plate geometry can vary with the year of production; a kit is not considered compatible just because the bolt holes line up.

VADEN ORIGINAL offers its **Compressor Overhaul (cylinder head/valve plate/gasket)** product family, consisting of cylinder heads, valve plates and gasket sets for heavy commercial vehicle air compressors, in stock in its own catalogue. To identify the correct overhaul kit using your vehicle's compressor manufacturer number and chassis details, to obtain compatibility confirmation or to get an opinion on assessing the bottom end, you can make use of the VADEN ORIGINAL product family and our technical support line.

This document is for information only; in practice the vehicle manufacturer's current service manual and safety instructions apply. Values are general references for common heavy-duty systems; use the relevant OE service document for model-specific figures. © VADEN Otomotiv San. Tic. A.Ş. · vadenoriginal.com